




# SATO GENERATION 1 - INSTALLATION GUIDE

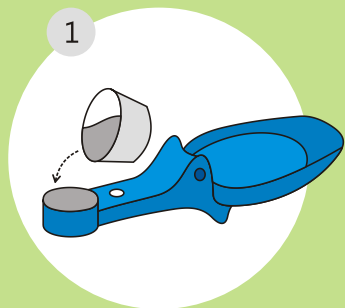


1  
Fill the cup of Flap Door with sufficient cement paste

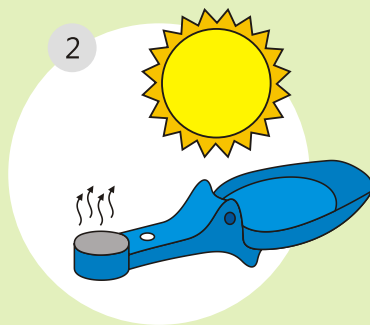


2  
Allow it to dry

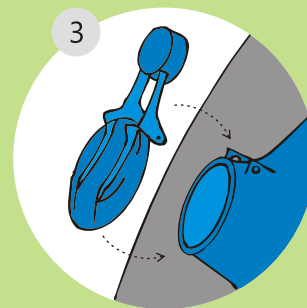


3  
Connect Flap Door with pan

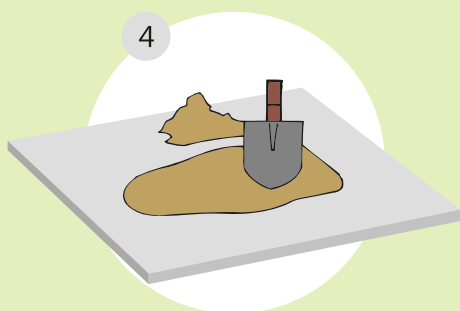


4  
Dig according to the size of collection box

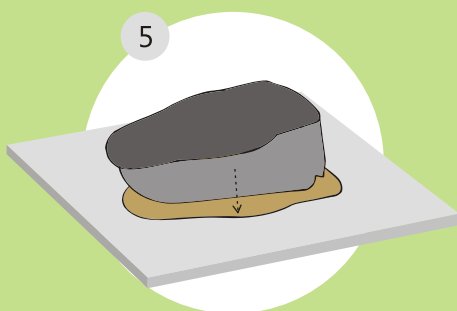


5  
Put collection box inside the dig

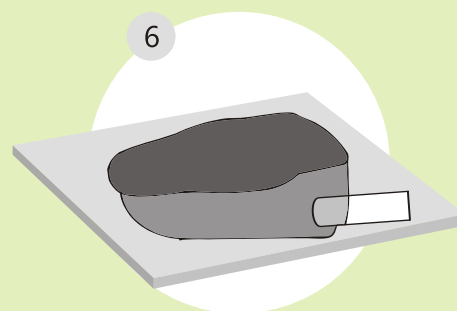


6  
Connect the pipe with collection box

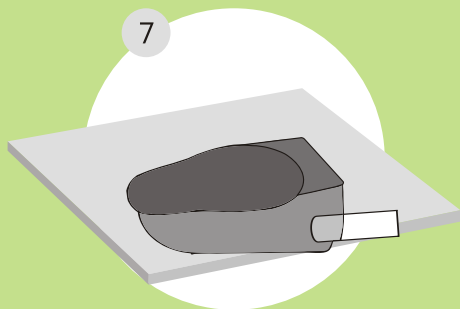


7  
Close flap

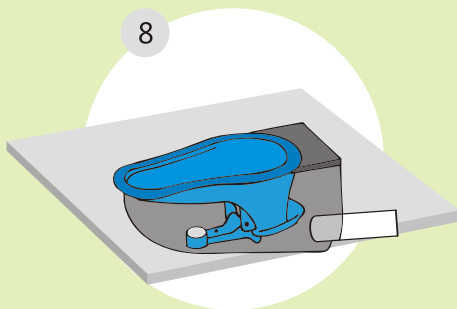

8  
Attach pan

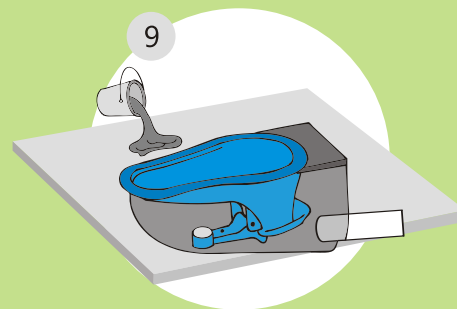

9  
Construct concrete flooring

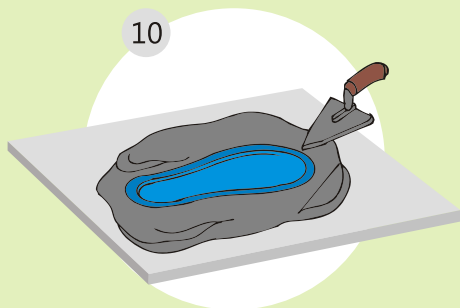

10  
Spread the mixture of sand and cement paste

